


coolbox

GUIDE

on how to program a Type 2 remote control

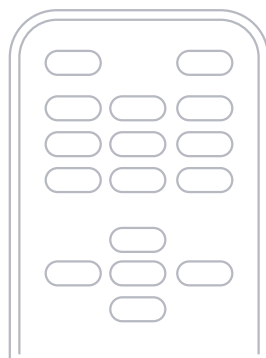

The remote control has 5 programmable buttons (marked in blue) which can be used to control other devices (TV set, decoder, amplifier, etc.)

To start programming, you should use the following procedure:

1. Press simultaneously and hold for 2 (two) seconds the **On/Off** and **A/V** buttons. When the green diode of the **On/OFF** button stops blinking and enters constant mode of operation this means that the remote control is in a programming mode.
2. The button which you wish to program should be pressed once without holding it. The green diode starts blinking.
3. The remote control of the other device should be placed against that of the STB device, while holding the desired button from it (*For example: hold the Volume + button of the TV set remote control*). After the green diode blinks quickly twice, you can continue programming the other buttons.
4. The programming is done and recorded simultaneously by pressing the **On/Off** and **A/V** buttons when the green diode stops blinking.
5. When reprogramming the buttons to increase or decrease the sound volume, their functionality to control the STB MAG-250 is lost. It is recommended that if you will use them, before their reprogramming you should increase the sound volume of the box to about 80%.
6. If necessary you can reset the default settings (respectively VOLUME buttons can restore their function to control the STB) by pressing simultaneously the **SETUP** and **OK** buttons and holding them for 2 (two) seconds. The red LED blinks five times and the remote control is reset.



national telephone line

0800 45 845