


coolbox

GUIDE

on how to program a Type 1 remote control

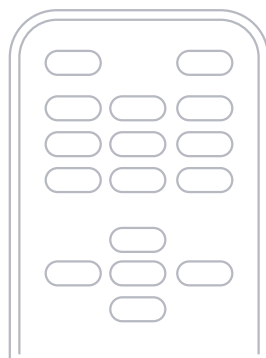

1. Press the **TVset** button and hold it for 3 (three) seconds. When the left red diode is activated (remains lit) this means that the remote control is in a programming mode. It lasts for 15 (fifteen) seconds and it is necessary that the first command be given within this time frame.
2. The button which you wish to program should be pressed once without holding it.

Example: Press once **Volume +** and then the red diode starts blinking for 15 (fifteen) seconds, you need to give the next command within this time frame.



3. The TV remote control should be directed against that of the STB device while holding the desired button from it (*Example: hold the **Volume +** button of the TV set remote control*). At the same time the red diode remains lit. It is important that while the diode is lit you should hold pressed the desired TV remote control button (*Example: **Volume +***). Otherwise if you just press the desired button without holding it, it is possible that the programming will not be done or will be done incorrectly.
4. Finishing the programming of the button is indicated with three blinks of the red diode. After that the remote control is reset to a programming mode (the red diode remains lit) and you can start programming the next button or can press the button **TVset** to end the programming.

national telephone line

0800 45 845