

coolbox

GUIDE

on how to use time shift functions



Time shift functions of our interactive IP TV provide the following options:

- » pausing a live programme;
- » pausing a past programme;
- » rewinding a live programme;
- » rewinding and fast-forwarding a past programme;
- » watching missed programmes on certain channels for up to the past 7 (seven) days back


Check if a certain channels has the time control options

Press **OK button** of the remote control. In case you see the icon 🕒, near the time clock on the right side of the screen, this means that the **function** is available for the certain channel.



Buttons for using the time shift functions

Pause/Play button – performs the Pause and Play commands. By pressing the button once you pause the live programme. By pressing the button a second time, you cancel the Pause command and the programme which you are watching continues. This button is combined and Type 1 remote control has a Pause/Play **||▶**, icon and Type 2 remote control has Play/Pause **▶||** indication.

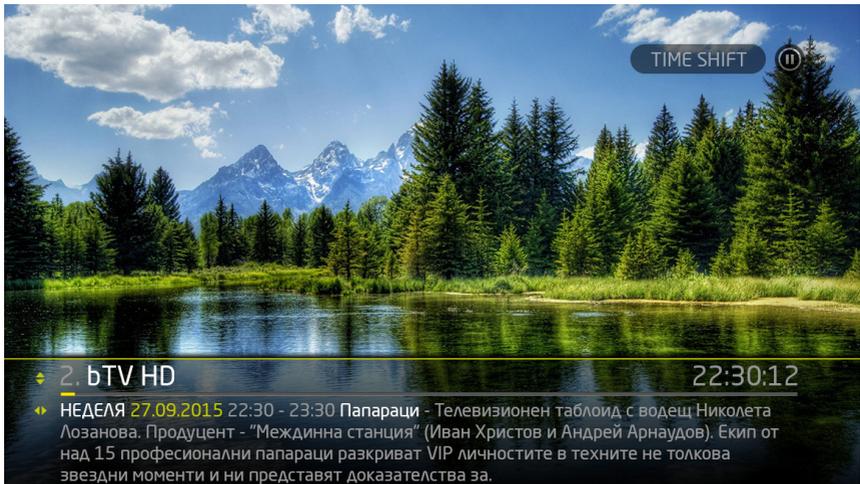

The rewind button **◀◀** allows you to rewind the programme which you are currently watching.

The fast-forward button **▶▶** allows you to fast-forward the programme from a certain moment to its real time broadcasting.

You can rewind to the beginning programme which you are currently watching by pressing once the **button PgUp (Previous)** **◀◀**. In case you press it twice, you will go back to the programme which was broadcast before the one which you are currently watching.


Watching missed programmes (Time shift)

You can watch a past programme by using the left arrow ◀ from the navigation buttons. After you have chosen the desired programme, press the **OK button**, to start playing the recorded programme.


In case you are watching a recorded programme and you want to start the next programme which is also recorded, then you can use the **PgDown (Next) ►►** button by pressing it once.

You can choose past programmes from **EPG of the Current Channel**, **Expanded TV Guide** and **Expanded EPG Menu**.

In order to access the **EPG of the Current Channel** mode while watching a programme in real time, you need to press the **OK button**.

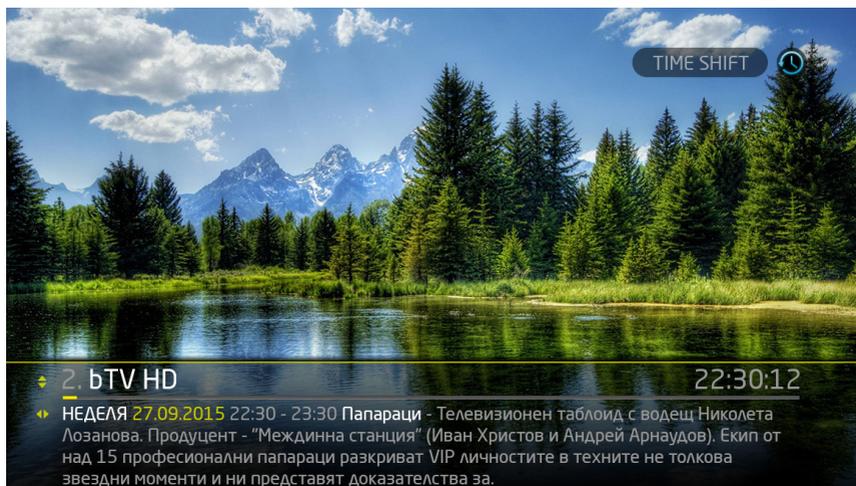

In order to access the **Expanded TV Guide** mode while watching a programme in real time, you should press the **INFO (i)** button, followed by the right arrow ►.

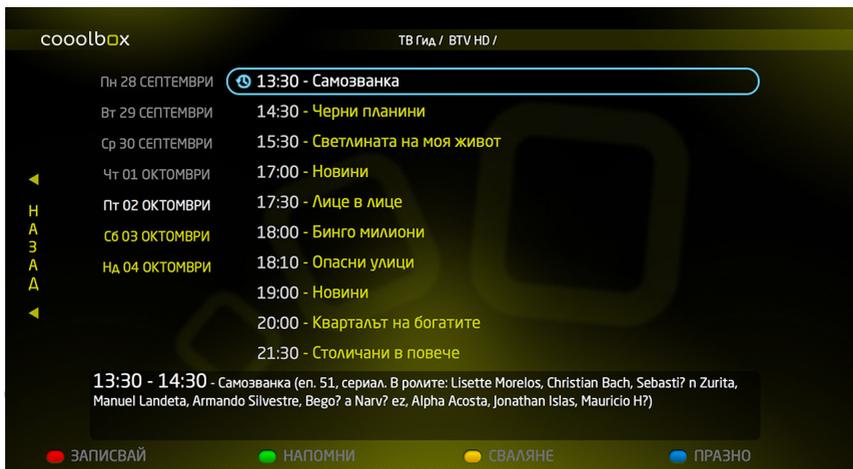


In order to access the **Expanded EPG Menu** mode while watching a programme in real time, you should press twice the **INFO (i)** button.

After the program is loaded on the screen, you can choose the desired programme by using left◀ and right► arrow. Press the **OK** button, to start the programme.



To exit a recorded programme => press the **Stop button**, choose right arrow ► **OK** and confirm by pressing the **OK button**.

To exit a recorded programme, you can also use the **EXIT button** (on a Type 1 remote control) or the **Home button** (🏠) (on a Type 2 remote control).

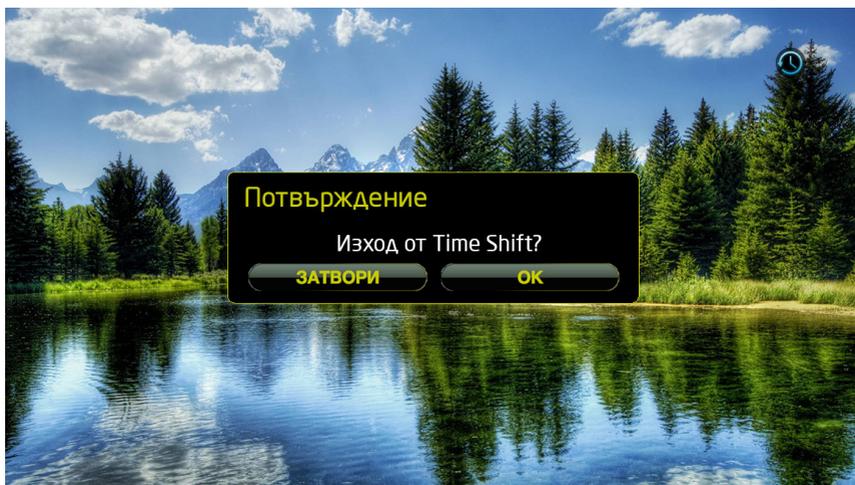

Additional extras with the APP button

When pressing the **APP button** while watching a recorded programme, an additional menu is shown. The following functions are added in it:


- » **Clock** - this is function which allows you to switch on and off the clock visualization on the screen of your digital TV set. It functions both when watching past programmes and programmes in real time.



- » **STB sound** - by using the special menu => STB sound, you can now control the sound of the STB device. The adjustment is done by the navigational arrows of the remote control. In case you have a Type 2 remote control and the programmable buttons have been programmed to work with your TV, this function can adjust the sound of the digital TV set.



» **Time Shift** - this is a function with which you can switch on and off the icon for watching past programmes - 🕒. When you have switched off the showing of the icon in order to check whether you are watching a past or a real time programme, you should press the OK button of the remote control. If you are watching a past programme, the icon of the function will appear in the upper right corner. If the icon is missing, then you are watching a real time programme.

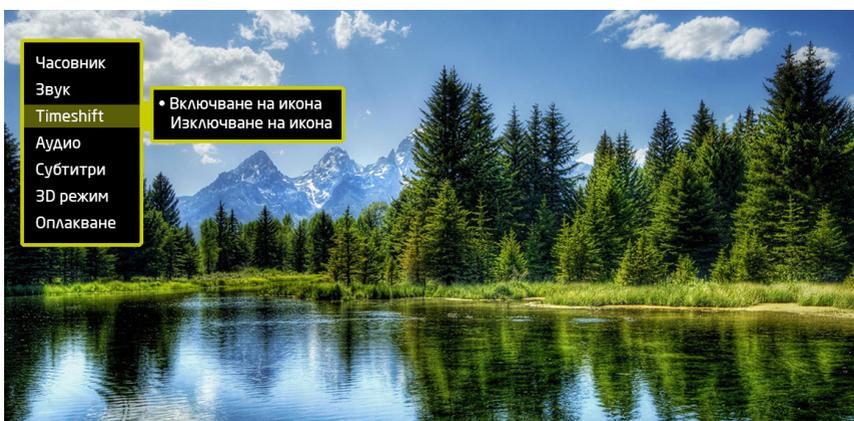



Type 1
remote control



Type 2
remote control

coolbox

national telephone line

0800 45 845
